

[Show](#)

FD235HFA529 JUMPER INFORMATION

This diagram provides the default jumper configuration in the FD235HFA529.

NOTE: Insertion of the plastic strap onto the post pin is defined as the on-state of the strap.

The function and description information of the straps is available from our catalog at <http://www.teac.com/DSPD/catalog.htm>

